


LASER LEVEL METER
MODEL No LD-02

USER MANUAL

Introduction

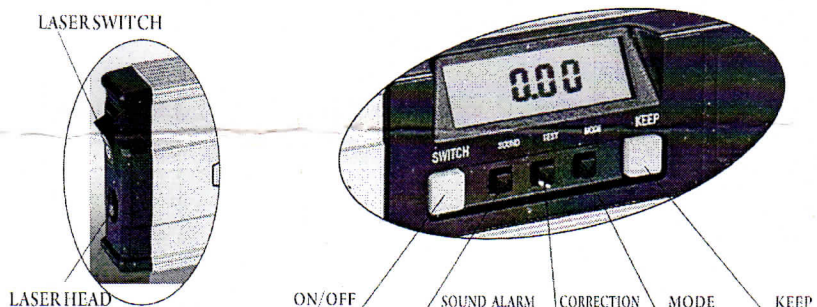

Keys, Display

- On/Off:** Switch the Level Display On or Off
Mode: Selection of Angle Measurement, Degrees, Percentage or Inches/Feet.
Sound: Activates Beep at 0° and 90°.
Test: For Calibration Checks.
Keep: To Store a Measured Value in the Units' Memory

Laser on/off switch located on the end of the level meter.

Powered by 1 x 9V PP3 Battery located at the opposite end of the meter to the laser output. Remove the end stop to access the battery clip and terminal connector.

Important

The Laser Level Meter is a precision instrument. It is important to avoid impacts or not to expose the device to temperatures outside the range of -20° to 50°C.

User Calibration

Place the meter on a surface with no more than a 3° incline, with 0° being the optimum angle.

Wait 10 seconds, press and hold the "TEST" key until "CAL1" appears on the display. Release the "TEST" key and the display will flash continuously.

Rotate the meter 180° and place in the same position. Wait 10 seconds, press and hold the "TEST" key until "CAL2" appears on the display. The level will now automatically calibrate itself and the display will return to normal reading.

Repeat the calibration procedure at least twice to calibrate the meter to the best accuracy.

ATP Instrumentation Ltd
Tournament Way
Ashby-de-la-Zouch
Leicestershire
LE65 2UU

General & Sales: Tel: 01530 566800
Technical: Tel: 01530 566804
Fax: 01530 560373
sales@atp-instruments.co.uk
www.atp-instrumentation.co.uk

